


## Assembly Instructions

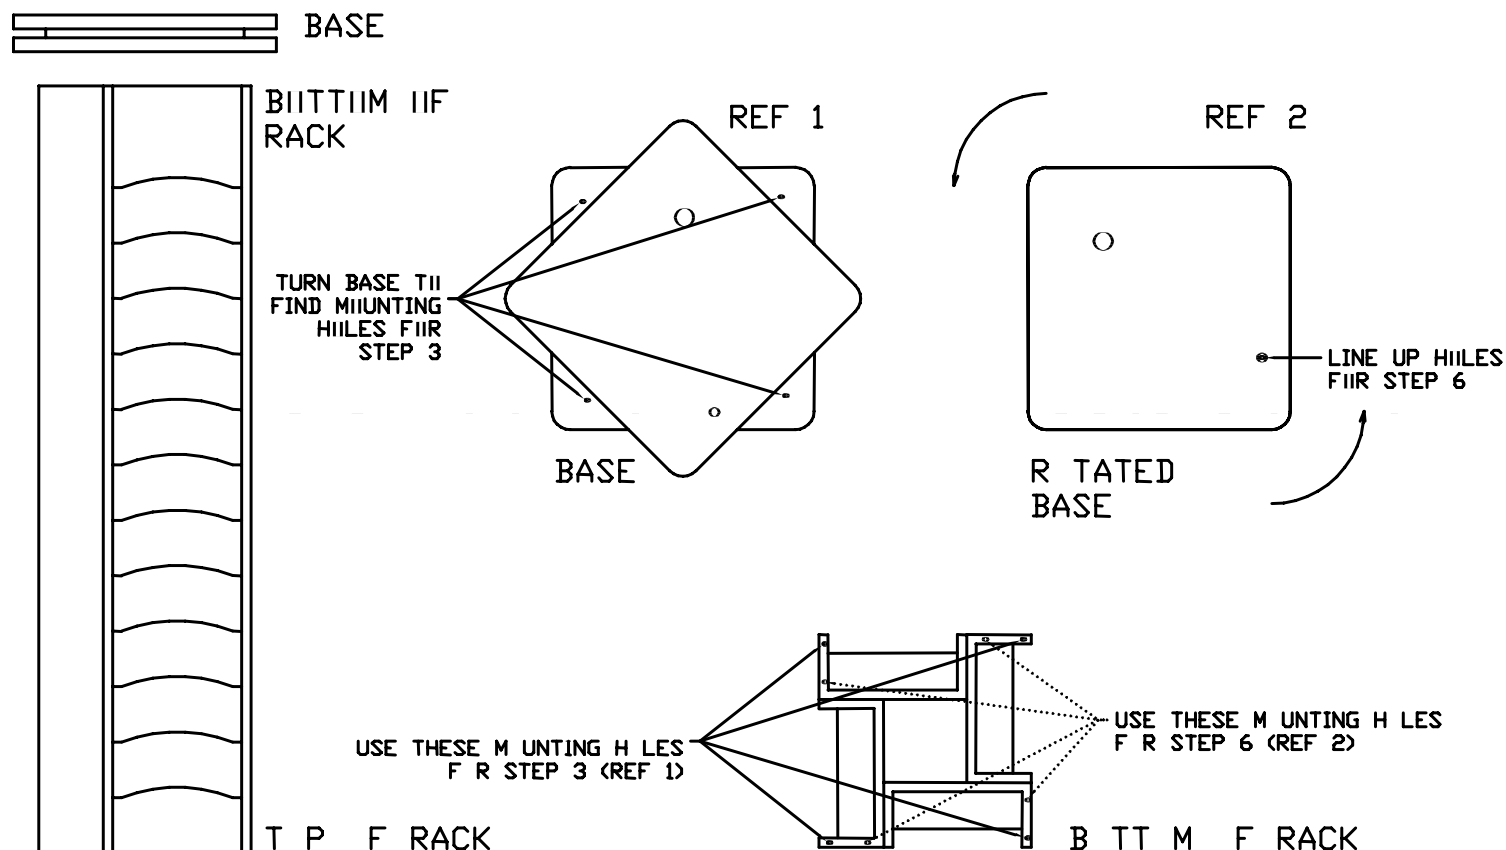

1. Place rack upside down on padded floor.
2. Place base on upside down rack with wood grain facing rack.
3. Align holes in base with holes in bottom of rack. **(REF 1)**
4. Start screws by turning only 1 turn each until all 4 screws are started. Make sure screws are started in pre-drilled holes or sides will crack.
5. Tighten all 4 screws until snug. **(Do not over tighten.)**
6. Rotate the bottom base to line up holes in the upper base and in the bottom of the rack. **(REF 2)** Fasten screws making sure the screws are going straight down into the hole of the rack. Tighten until snug.
7. Repeat #6 for the remaining 3 holes by rotating the bottom base until holes line up.
8. Carefully turn assembled rack right side up and position in desired location. This will require 2 people.

**WARRANTY** Buddy Products has a 2 year limited warranty against defects in workmanship and materials. Returns will be handled on a case by case basis.

Questions or Concerns? Feel free to call our customer service department at 800-886-8688. Business hours are 7:30am - 4:30pm CST or you can visit our web site at [www.buddyproducts.com](http://www.buddyproducts.com)